


CLAAS S10  
Terminal Software 2.7.22



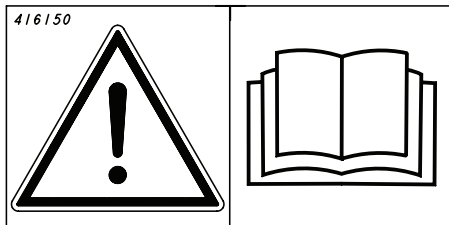

Denna Quick Start ersätter inte instruktionsboken!  
Denne Quick Start erstatter ikke instruktionsbogen!  
Denne Quick Start erstatter ikke instruksjonsboken!  
Tämä Quick Start-pikaopas ei korvaa käyttöohjekirjaa!  
This Quick Start guide does not replace the instruction manual!  
Diese Quick Start-Anleitung ist kein Ersatz für das Handbuch!  
Ce guide Quick Start ne remplace pas le manuel d'instructions!  
Instrukcja szybkiego uruchomienia nie zastępuje instrukcji obsługi,  
którą należy przeczytać przed rozpoczęciem użytkowania maszyny.  
Šis ātrais mācību materiāls neaizvieto lietošanas instrukciju!  
Šis „Quick Start“ vadovas nepakeičia instrukcijas!

See kiirjuhend Quick Start ei asenda kasutusjuhendit!  
Návod Quick Start nenahrazuje návod k použití!  
Ez a Quick Start útmutató nem helyettesíti a Használati útmutatót!  
La presente guida Quick Start non sostituisce il manuale di istruzioni!  
Это руководство «Quick Start» не заменяет основное  
руководство по эксплуатации!  
Ta vodnik Quick Start ne nadomešča priročnika z navodili!  
Този бърз справочник не заменя наръчника!  
Ο παρών οδηγός Γρήγορης εκκίνησης δεν αντικαθιστά το εγχειρίδιο οδηγιών!

# Väderstad ISOBUS implement with CLAAS S10

**NOTE!** *This document is a quick guide only and requires that the Väderstad implement is connected correctly and that the user possesses some basic knowledge of how this display and its functions is working. For further information regarding display functions we refer to the user manual provided by the manufacturer.*

**TIP!** Some chapters in this guide refers to the displays user manual. Before you use this guide in field, please read through this guide completely and make sure you have access to the required documentation.

## 1. Introduction

When installing and running a Väderstad ISOBUS implement with a ISOBUS terminal, it is important to follow and complete the steps in this guide.

This document is a quick guide only and requires that the Väderstad implement is connected correctly to the display and that the user possesses some basic knowledge of how this display and it's functions is working. For further information regarding display functions we refer to the operators manual provided by the manufacturer.

Before you proceed to the next chapter, please ensure that both the terminal software and the Väderstad software matches the one specified on the Väderstad homepage.

<http://www.vaderstad.com/products/vaderstad-e-services/isobus>

## 2. Check the terminal software version

It's important that the display software matches the one tested from Väderstad. If the display software separates from the one tested, some functionality may not work as expected.

To view the display software version, from the main screen press the button(diagnostics) in the upper right corner. **Menu -> Diagnostics -> Terminal Diagnostics.**

Check the row saying "Software Version".



Screen 1. Display software version screen.

If the software version is incorrect, please contact your local CLAAS dealer. If the version matches please continue to the next step.


## 3. Check Activations

In order for “Section Control” and/or “Variable Rate” to work the display must be unlocked with a specific license. If the display is locked, please advise your local display reseller in order to purchase this activation.

To view the display unlocks, from the main screen go to:

**Menu -> Settings -> Subscriptions**


Make sure “ISOBUS TC BAS”, “ISOBUS TC GEO”, “ISOBUS TC SC” is enabled.

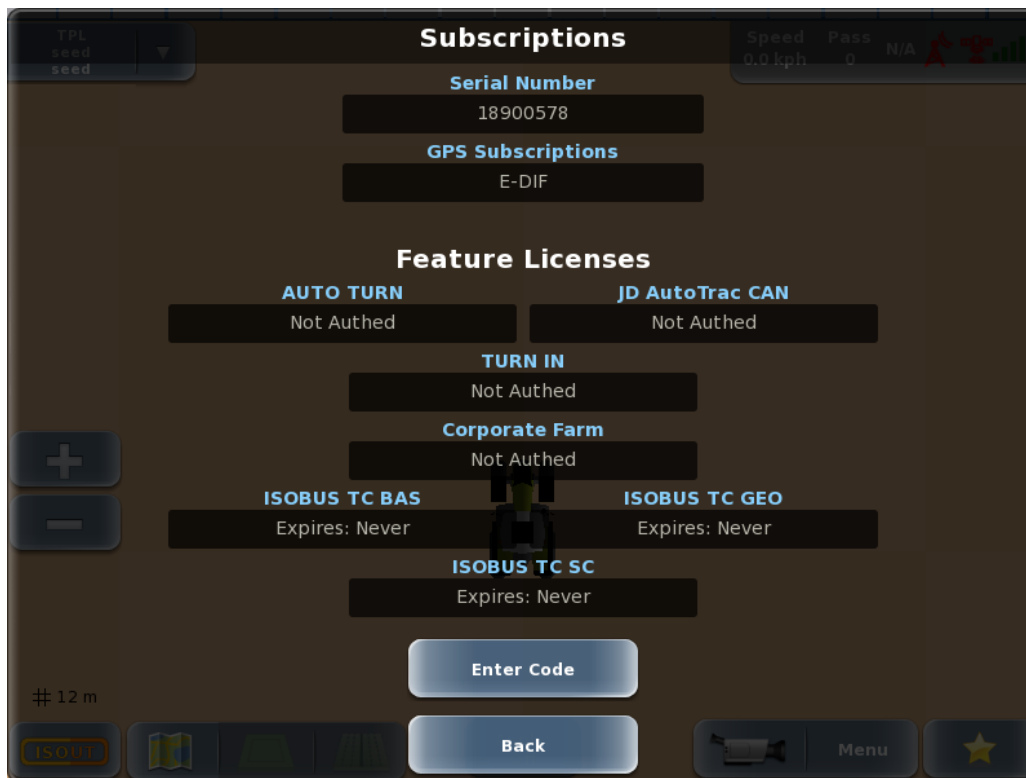

Screen 2. Display activations

## 4. Activating Task Controller in Väderstad User Interface (UI)


Open the “Väderstad UI”. In the Väderstad UI, press “Settings”, on the next screen press “General Settings”. Toggle the Task Control button to “ON” (screen 3).

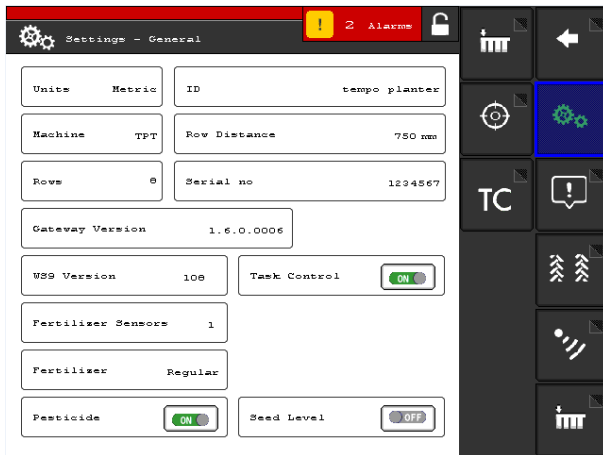


Screen 3. Task Controller ON

Once the Task Controller is set to “ON” a new implement will be detected by the display.

From the general settings, press the “TC-submenu” button. In this menu you’re telling the display what product to be controlled and also what functions to be used by turning “Section Control” and/or “Variable Rate” to ON or OFF. In this menu you’re also able to set the implement offsets and ON/OFF timers for each product. For further information regarding these settings please read the “Task Control”-chapter in the Väderstad E-Control user manual.

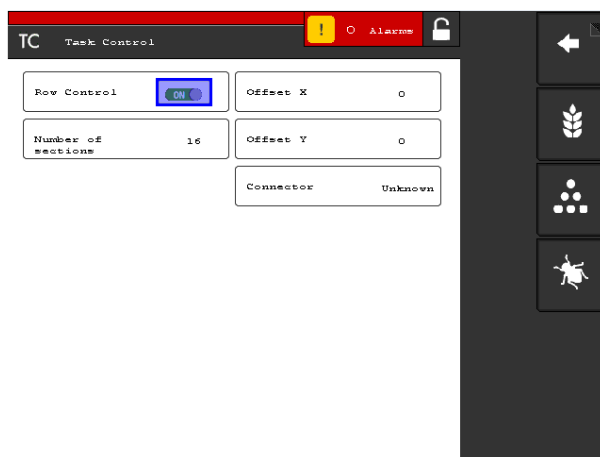

Screen 4. TC- Submenu Tempo

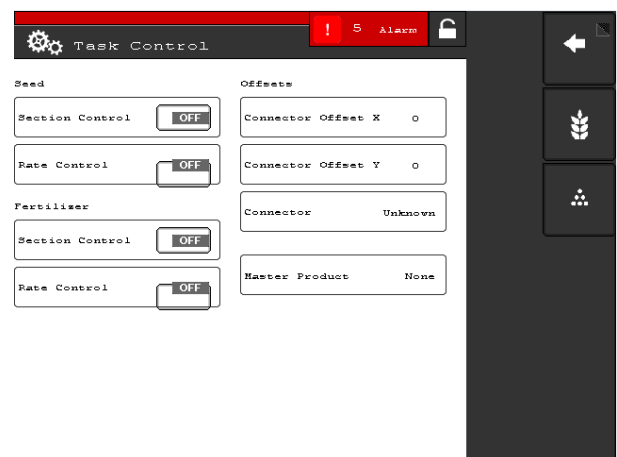

Screen 5. TC-Submenu RD/RDA

When all settings is set and the TC-submenu is exited the Task Controller object pool is updated and sent to the display. After 20 seconds the implement profile is updated with the latest settings.

## 5. Creating a implement on the display

When Task Controller is used the S10 display automatically creates a implement profile, please proceed to the next chapter of this guide.

## 6. Create job and/or enter necessary documentation settings

From the home screen press **Menu -> Tasks -> New Task** and fill out the information required. Under the implement menu, make sure to choose the Väderstad Implement connected (screen 8).



Screen 7. Successful implement configuration



Screen 8. Management selection

For further information on how to set up a task, see the "7.11 Task Management (258)"-chapter in the operators manual.

## 8 Use of "Section Control"

### 8.1 Create field and field boundaries

If section control is to be used when exiting field and/or headland boundaries these must be defined. For further information, please see the "7.14 Boundaries (308)"-chapter in the operators manual.

### 8.2 Section Control Settings

If section control is to be used when exiting field and/or headland some settings must be set. For further information, please see the "7.21 Partial width display and partial width control (348)"-chapter in the operators manual.

## 9 Use of "Variable Rate"

### 9.1 Import/Load shapefile

If "Rate Control" is to be used, a prescription file must be used. For further information, please see the "7.22 Rate Control (351)"-chapter in the operators manual.

## 10 Attachments

**NOTE!** *A full version of the CLAAS S10 operators manual is not available online, please contact your local reseller.*

Väderstad E-Services Rapid

<http://pdmlink.vaderstad.com/openext.aspx?id=10065801>

Väderstad E-Services Rapid A

<http://pdmlink.vaderstad.com/openext.aspx?id=10043228>

Väderstad E-Services Tempo L

<http://pdmlink.vaderstad.com/openext.aspx?id=10064506>

Väderstad E-Services Tempo T, Tempo F, Tempo V, Tempo R, FH

<http://pdmlink.vaderstad.com/openext.aspx?id=10038077>

Väderstad E-Services Spirit och Spirit R

<http://pdmlink.vaderstad.com/openext.aspx?id=10052287>



Väderstad AB  
SE-590 21 VÄDERSTAD  
Phone: +46 142-820 00  
[www.vaderstad.com](http://www.vaderstad.com)

